

Required Maintenance Intervals DODGE CHALLENGER 2011-2014 SRT

Perform Maintenance Every			Maintenance Items
(Where time and mileage are listed, follow the interval that occurs first.)			
Miles	Kilometers	Months	
7500	12000	6	Change the engine oil and engine oil filter.†† Rotate tires.
15000	24000	12	Change the engine oil and engine oil filter.†† Rotate tires. If you are using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary. Inspect the brake linings, and replace if necessary. Inspect the exhaust system. Perform the first inspection at 15,000 miles (24 000 km) or 12 months. Inspect the manual transmission fluid (if equipped), add as necessary. Inspect the rear axle fluid.
22500	36000	18	Change the engine oil and engine oil filter.†† Rotate tires. Inspect the CV joints. Inspect the exhaust system. Inspect the front suspension, tie rod ends and boot seals, and replace if necessary.
30000	48000	24	Change the engine oil and engine oil filter.†† Rotate tires. Replace the engine air cleaner filter. Adjust parking brake on vehicles equipped with four-wheel disc brakes. Inspect the brake linings, and replace if necessary. Inspect the rear axle fluid. Change the manual transmission fluid (if equipped) if using your vehicle for any of the following: Most of your driving is at sustained high speeds during hot weather, above 90°F (32°C), driving in dusty conditions, or stop and go driving.
37500	60000	30	Change the engine oil and engine oil filter.††

			Rotate tires.
45000	72000	36	<p>Change the engine oil and engine oil filter.††</p> <p>Rotate tires.</p> <p>If you are using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</p> <p>Inspect the brake linings, and replace if necessary.</p> <p>Change the rear axle fluid if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing.</p> <p>Inspect the manual transmission fluid (if equipped), add as necessary.</p> <p>Inspect the CV joints.</p> <p>Inspect the exhaust system.</p> <p>Inspect the front suspension, tie rod ends and boot seals, and replace if necessary.</p>
52500	84000	42	<p>Change the engine oil and engine oil filter.††</p> <p>Rotate tires.</p>
60000	96000	48	<p>Change the engine oil and engine oil filter.††</p> <p>Rotate tires.</p> <p>Replace the engine air cleaner filter.</p> <p>Adjust parking brake on vehicles equipped with four-wheel disc brakes.</p> <p>Inspect the brake linings, and replace if necessary.</p> <p>Change the automatic transmission fluid and filter if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing.</p> <p>Change the manual transmission fluid (if equipped) if using your vehicle for any of the following: Most of your driving is at sustained high speeds during hot weather, above 90°F (32°C), driving in dusty conditions, or stop and go driving.</p> <p>Inspect the rear axle fluid.</p>
67500	108000	54	<p>Change the engine oil and engine oil filter.††</p> <p>Rotate tires.</p> <p>Inspect the CV joints.</p> <p>Inspect the exhaust system.</p> <p>Inspect the front suspension, tie rod ends and boot seals, and replace if necessary.</p>
75000	120000	60	Change the engine oil and engine oil filter.††

			<p>Rotate tires.</p> <p>If you are using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</p> <p>Inspect the brake linings, and replace if necessary.</p> <p>Flush and replace the engine coolant at 60 months if not done at 105,000 miles (168 000 km).</p> <p>Inspect the manual transmission fluid (if equipped), add as necessary.</p> <p>Inspect the rear axle fluid.</p>
82500	132000	66	<p>Change the engine oil and engine oil filter.††</p> <p>Rotate tires.</p>
90000	144000	72	<p>Change the engine oil and engine oil filter.††</p> <p>Rotate tires.</p> <p>Replace the engine air cleaner filter.</p> <p>Inspect and replace the PCV Valve if necessary.*</p> <p>Adjust parking brake on vehicles equipped with four-wheel disc brakes.</p> <p>Inspect the brake linings, and replace if necessary.</p> <p>Inspect the CV joints.</p> <p>Inspect the exhaust system.</p> <p>Change the rear axle fluid if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing.</p> <p>Change the manual transmission fluid (if equipped) if using your vehicle for any of the following: Most of your driving is at sustained high speeds during hot weather, above 90°F (32°C), driving in dusty conditions, or stop and go driving.</p> <p>Inspect the front suspension, tie rod ends and boot seals, and replace if necessary.</p>
97500	156000	78	<p>Change the engine oil and engine oil filter.††</p> <p>Rotate tires.</p>
105000	168000	84	<p>Change the engine oil and engine oil filter.††</p> <p>Rotate tires.</p> <p>Replace the spark plugs.</p> <p>If you are using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</p> <p>Inspect the brake linings, and replace if necessary.</p>

			Flush and replace the engine coolant if not done at 60 months. Inspect the manual transmission fluid (if equipped), add as necessary. Inspect the rear axle fluid.
112500	180000	90	Change the engine oil and engine oil filter.†† Rotate tires. Inspect the CV joints. Inspect the exhaust system. Inspect the front suspension, tie rod ends and boot seals, and replace if necessary.
120000	192000	96	Change the engine oil and engine oil filter.†† Rotate tires. Replace the engine air cleaner filter. Adjust parking brake on vehicles equipped with four-wheel disc brakes. Inspect the brake linings, and replace if necessary. Change the automatic transmission fluid and filter. Change the manual transmission fluid (if equipped) if using your vehicle for any of the following: Most of your driving is at sustained high speeds during hot weather, above 90°F (32°C), driving in dusty conditions, or stop and go driving. Inspect the rear axle fluid.
127500	204000	102	Change the engine oil and engine oil filter.†† Rotate tires.
135000	216000	108	Change the engine oil and engine oil filter.†† Rotate tires. If you are using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary. Inspect the brake linings, and replace if necessary. Inspect the CV joints. Inspect the exhaust system. Inspect the manual transmission fluid (if equipped), add as necessary. Change the rear axle fluid if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing. Inspect the front suspension, tie rod ends and boot seals, and replace if necessary.

142500	228000	114	Change the engine oil and engine oil filter.†† Rotate tires.
150000	240000	120	Change the engine oil and engine oil filter.†† Rotate tires. Replace the engine air cleaner filter. Adjust parking brake on vehicles equipped with four-wheel disc brakes. Inspect the brake linings, and replace if necessary. Change the manual transmission fluid (if equipped) if using your vehicle for any of the following: Most of your driving is at sustained high speeds during hot weather, above 90°F (32°C), driving in dusty conditions, or stop and go driving. Inspect the rear axle fluid.